GB

PROGRAMME CHART

Whirlpool is a registered trademark of Whirlpool U.S.A.

6th SENSE: Optimum wash results coupled with maximum energy savings.

The two sensor-controlled programmes are recommended for routine washes. They use double sensor technology designed to ensure the best wash results with minimum water and energy consumption.

Rinse aid level indicator
Add rinse aid.

Salt level indicator
Add regeneration salt.

Programme progress indicator

Pre-rinse
Only lights up for programmes with prewash (the symbol "+" in the table below indicates that detergent must be added).

Rinsing / Washing

Drying

End **Programme end**

Half Load button / Multizone
Load the upper **or** lower rack only.
This function can be used with any programme.
Press once = upper rack
Press twice = lower rack
Press 3 times = Off (half load function deactivated).

3h 6h 9h

Delayed start button
Starts the dishwasher at the set time.
It is possible to programme a delay of 3 - 6 - 9 hours.

Start **Start button indicator lamp**
Switches on when the dishwasher is operating.
Flashes when a fault occurs.
Switches off at the end of the programme.

Programme Symbol and Temperature	Programme selection and recommended load type	Detergent Pre-rinse / Washing		Consumption * Normal load (...) Half load		
		Small compartment	Large compartment	Water (Litres)	Energy (kWh)	Time (Min.)
Eco-Normal 40 - 55° C	Recommended programme **for routine washes**, for crockery with little or no dried-on food.	+	+	17,5 (13.5) 30% 12,0 (11.5)	1,43 (1.3) 30% 1,00 (0.9)	90 (80) 30% 60 (60)
Intensive 60 - 70° C	Recommended programme **for heavily soiled crockery**, with dried-on food. Especially suitable for pans and saucepans.	+	+	25,0 (19.5) 13,5 (11.5)	2,50 (1.7) 1,65 (1.3)	115 (98) 95 (90)
Pre-rinse	Crockery to be washed later.	-	-	5,0 (4.2)	0,02 (0.02)	9 (9)
Glasses 40° C	Lightly soiled glasses and cups.	-	+	12,5 (10.5)	0,82 (0.78)	60 (59)
Normal 50° C 1)	Normally or heavily soiled crockery, with dried-on food.	+	+	16,0 (14.5)	1,24 (1.10)	91 (88)

1) **Reference programme for Test Institute and energy label.**

*) **Values for normal conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.**

5019 100 91153

(We reserve the right to make technical modifications)

Quick Reference Guide

GB

Daily check list

1. Arrange crockery so that items do not touch each other.
2. Load cups at an inclination to facilitate water circulation.
3. In general, place the cutlery in the basket with the handles positioned downwards, but ensure that sharp knives and forks that might cause injury are placed in the basket with the handles positioned upwards.
4. Make sure the water jet can reach all loaded items and that the spray arms rotate freely.
5. Turn on the water supply tap before starting the dishwasher.

Important

- **Switch off the dishwasher once the "Start" indicator lamp has switched off. If the dishwasher is turned off during the washing programme, it will start again from the same point in the programme when it is turned back on.**
- **If a fault occurs or you wish to change the current programme, press the "START" button for about 5 seconds until the Start indicator lamp switches off! Refer to the "Troubleshooting Guide" in these user instructions to remedy any problems.**
- **If a regeneration salt is to be added, IMMEDIATELY start a washing programme, in order to eliminate any residual salt.**
- **Sometimes even when the regeneration salt container is full, the corresponding indicator lamp may illuminate during the first wash cycle.**

Upper rack

Crockery holders:

- Down: cups and long-stemmed glasses.
- Raised: plates.

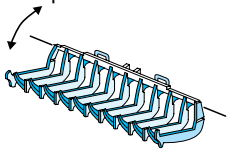

Cutlery holder for long utensils:

- Up: glass holder (gently lift up and release).
- Down: large cutlery (gently lift up).
- Place knives with blades facing downwards.

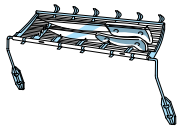

Glass holder:

- The glass holder can be moved sideways.
- Below: small glasses.
- Above: long-stemmed glasses.

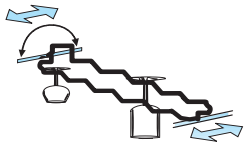

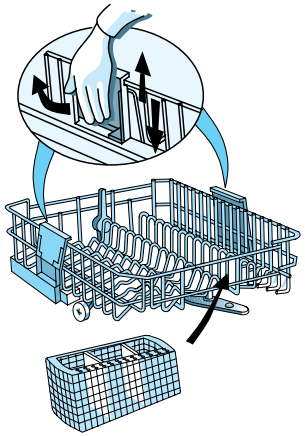

Half load button / Multizone:

If only the upper rack is to be loaded, remove the cutlery basket from the lower rack and place it in the upper one.

Height adjustment:

(The dishwasher is delivered with the upper rack in the top position).

The rack height can also be changed when loaded.

- To lower: pull out the two side handles and gently lower the rack.
- To raise: pull up the two side handles until the rack clicks into place.
- The rack must be level on both sides.

Lower rack

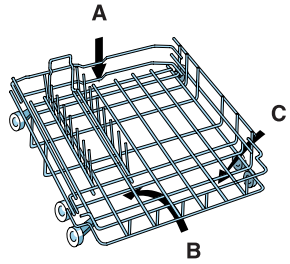

Half load button / Multizone:

Loading the lower rack only: greater washing power, especially for plates and saucepans.

Cutlery basket:

The cutlery basket can be removed to increase available space.



Plate holders:

- The plate holders may be removed to increase available space.
- To remove: pull the handle up.
- To reposition: simply insert in the required position (normal or crosswise).